


Thank you for purchasing the Cheng Concrete Exchange Faucet Knockout. Each Faucet Knockout is made out of durable polyurethane rubber, designed to withstand the abuses of concrete countertop fabrication.

When used correctly, the Cheng Concrete Exchange Faucet Knockout casts a finished void in your cast concrete countertop that is suitable for virtually all faucet fixtures, control valves, and dishwasher vents. Available in two sizes, 2" and 2-1/2".


### TO ASSEMBLE:

Drill a 5/32" hole down through the center of the Knockout. The rubber is soft so the hole will not appear to drill out cleanly.

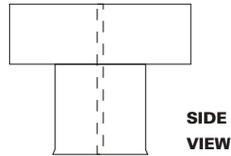

**SIDE  
VIEW**

Push the screw with washer all the way through the center hole, starting from the 3" end.

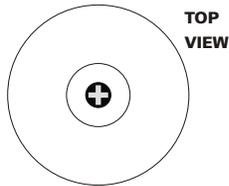

**TOP  
VIEW**

### TO USE IN MOLD:

Drill a 1/8" hole in the mold where the centerpoint of your Faucet Knockout will be placed.

Insert the end of the screw into the pre-drilled hole. Tighten Faucet Knockout securely to the base of the mold as shown. The top of the screw and the washer should depress into the rubber slightly.

*Faucet Knockouts should be placed no closer than 2-3/4" from center of knockout to the sink opening.*

